

MODEL 851 SERIES ELECTRONIC PRESSURE TRANSMITTERS FOR HAZARDOUS LOCATIONS

INSTRUCTIONS FOR INSTALLATION,
OPERATION, AND CALIBRATION



851F
flushmount

851T with
conduit adaptor
for Explosion
Proof rating

851T std with nut
for I.S. rating



Flange mount
standard
weld pipe

AMETEK®
PMT PRODUCTS

K796341 REV D 10/2015

WARRANTY POLICY

AMETEK ("Seller") warrants for a period of one year from date of shipment that all products manufactured by the Seller are free from defects of material and workmanship when used within the service, range, and purpose for which they were manufactured. Seller will, at its option, repair, replace, or refund the purchase price of parts found by Seller to be defective in material or workmanship provided that written notice of such defect requesting instructions for repair, replacement, or refund is received by Seller at the address below within one year after the date of shipment and provided that any instructions thereafter given by Seller are complied with.

This warranty shall not apply [i] to the performance of any system of which Seller's products are a component part, [ii] to deterioration by corrosion or any cause of failure other than defect of material or workmanship, or [iii] to any of Seller's products or parts thereof which have been tampered with or altered or repaired by anyone except Seller or someone authorized by Seller, or subjected to misuse, neglect, abuse or improper use or misapplication such as breakage by negligence, accident, vandalism, the elements, shock, vibration, or exposure to any other service, range, or environment of greater severity than that for which the products were designed.

SELLER MAKES NO WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION ANY WARRANTIES OF FITNESS OR OF MERCHANTABILITY WITH RESPECT TO ITS PRODUCTS, OR ANY PART OF, OTHER THAN AS EXPRESSLY SET FORTH ABOVE. NOR SHALL SELLER HAVE INCURRED ANY OTHER OBLIGATIONS OR LIABILITIES OR BE LIABLE FOR ANY ANTICIPATED OR LOST PROFITS, INCIDENTAL DAMAGES, CONSEQUENTIAL DAMAGES, @ CHARGES, OR ANY OTHER LOSSES INCURRED IN CONNECTION WITH THE PURCHASE, INSTALLATION, REPAIR, OR OPERATION OF ITS PRODUCTS [INCLUDING ANY PARTS REPAIRED OR REPLACED].

This warranty does not extend to anyone other than the original Buyer from Seller

AMETEK
U.S. GAUGE DIVISION

820 PENNSYLVANIA BLVD . FEASTERTVILLE. PA 19053-7886

CONTENTS

.....	PAGE
WARRANTY	cover
INTRODUCTION	ii
SAFETY SUMMARY	ii
SECTION I - SPECIFICATIONS	
MODEL 851 SERIES TRANSMITTER MODEL NUMBER CODE	1-1
DESCRIPTION	1-2
SPECIFICATIONS	1-2
FUNCTIONAL	1-2
PERFORMANCE	1-2
PHYSICAL	1-2
OUTLINE DIMENSIONS (MODEL 851T)	1-3
OUTLINE DIMENSIONS (MODEL 851F)	1-4
CLASSIFICATION (FM & CSA)	1-5
SECTION II - INSTALLATION	
PIPING (MODEL 851T)	2-1
PIPING (MODEL 851F)	2-2
STEAM PIPING	2-2
WIRING	2-2
BASIC INSTALLATION CIRCUIT DIAGRAMS	2-4
INTRINSICALLY SAFE SYSTEM BARRIER LIST (CSA)	2-5
SECTION III - OPERATION	
PRINCIPLE OF OPERATION	3-1
ADJUSTMENTS	3-1
ZERO	3-1
SPAN	3-1
TURNDOWN	3-1
SECTION IV - CALIBRATION	
FACTORY CALIBRATION	4-1
PIPING FOR CALIBRATION	4-1
CALIBRATION INSTRUMENTATION	4-1
CALIBRATION PROCEDURE	4-1
OUT OF SYSTEM CALIBRATION	4-2
CALIBRATION USING INDIVIDUAL EQUIPMENT	4-3
SECTION V - SERVICE AND PARTS	
FACTORY SERVICE AND PARTS	5-1

INTRODUCTION

The Model 851 line is a series of pressure transmitter products featuring zero and span adjustability, 5:1 range turndown, all 316 stainless steel construction in a durable and cost effective package. The transmitters provide 4-20 mA output, 0.25% accuracy and agency approvals for intrinsically safe apparatus and explosion proof in hazardous locations.

Model 851T provides as standard a 1/2" NPT female process connection for direct mounting to existing piping systems. It is available with a nut/grommet cable connection with 22 AWG wire or with a 1/2" NPT female conduit connection for explosion proof applications.

Model 851F provides flush mount capability in a customer welded connection assembly. It is also available in both electrical connection options.

NOTE: This unit is not designed for submersible applications.

SAFETY SUMMARY

This instrument is designed to prevent accidental shock to the operator when properly used. However, no design can ensure the safety of an instrument improperly installed or used negligently. Read this manual carefully and completely before operating the instrument. Failure to read this manual in its entirety could result in damage to the instrument or injury to the operator. Standard safety precautions must be used during installation and operation. Important messages located throughout this manual are as follows:

- | | |
|-------------------|--|
| WARNING - | Denotes a hazardous procedure or condition which, if ignored, could result in injury or death to the operator. |
| CAUTION - | Denotes a hazardous procedure or condition which, if ignored, could result in damage or destruction to the instrument. |
| IMPORTANT- | Denotes a procedure or condition which is essential to the correct operation of the instrument. |
| NOTE- | Specifies supplementary and perhaps essential information in relation to a particular procedure or condition. |

SECTION I

SPECIFICATIONS

MODEL 851 TRANSMITTER MODEL NUMBER CODE

851 ELECTRONIC PRESSURE TRANSMITTER PROCESS CONNECTION

PROCESS CONNECTION

T = 1/2- NPT FEMALE>T

F = FLUSH (see note 1)

PRESSURE TYPE

G = GAUGE

PRESSURE RANGE

3015 = 3-15 PSI

0015 = 0/3 To 0/15 PSI

0030 = 0/6 To 0/30 PSI

0100 = 0/20 To 0/100 PSI

0300 = 0/60 To 0/300 PSI

1000 = 0/200 To 0/1000 PSI

3000 = 0/600 To 0/3000 PSI

5000 = 0/1000 To 0/5000 PSI

ELECTRICAL CONNECTION

N = STANDARD NUT/CABLE* (see note 4)

C = 1/2" NPT FEMALE CONDUIT CONNECTION/CABLE

DIAPHRAGM

L = 316L STAINLESS STEEL

H = HASTELLOY C (see note 2)

FILL

S SILICONE

AGENCY APPROVAL

A = FM & CSA, EXP. PROOF (see note 3) PLUS CSA, IS

C = CSA, IS ONLY

COUPLING (FLUSH ONLY)

S = 316 SS COUPLING; TEFLON GASKET

P = 316 SS PLUG, COUPLING; TEFLON GASKET

N = NO COUPLING; TEFLON GASKET

()

CALIBRATED RANGE

851 T G 0015 C L S A S (0-15 PSI) EXAMPLE

1. Flush Connection only available up to 300 PSI.
 2. Available on Flush Connection Only.
 3. Explosion Proof Approval requires "C" electrical connection option.
 4. Not available with agency approval "A", FM & CSA explosion-proof.
- * Cable length is 24" (22 AWG) standard.

SECTION I

SPECIFICATIONS

DESCRIPTION

The Model 851 is the most durable, accurate and cost-effective pressure transmitter presently available. An adjustable all stainless steel transmitter, it is designed for years of stable performance in even the toughest environmental and media conditions.

Approvals include ratings for CSA, for both intrinsic safety and explosion-proof, and FM for explosion-proof only.

The Model 851 also meets NACE standards for offshore applications.

The small size and light weight of the Model 851 transmitter eliminate the need for complicated mounting hardware and mechanical supports, thereby reducing installation time substantially. The in-line connection permits simple field wiring without the need for additional hardware, adding to the speed and ease of installation. Its slim profile allows for mounting, in places too tight for most other transmitters.

A 4-20 mA output is standard with a 12-40 Vdc power supply. With all 316 stainless steel welded construction, the Model 851 is compatible with corrosive media and hazardous environments. With the cover sealed Double-O-Ring assembly, this transmitter is weather proof and capable of a direct spray.

SPECIFICATIONS

FUNCTIONAL SPECIFICATIONS

Service: Liquid, Gas or Vapor

Range Limits:


- 0/3 to 0/115 psi (0/.2 to 0/1 bar)
- 0/6 to 0/30 psi (0/.4 to 0/2 bar)
- 0/20 to 0/100 psi (0/1.4 to 0/7 bar)
- 0/60 to 0/300 psi (0/4 to 0/20 bar)
- 0/200 to 0/1000 psi (0/14 to 0/70 bar)
- 0/600 to 0/3000 psi (0/40 to 0/200 bar)
- 0/1000 to 0/5000 psi (0/70 to 0/350 bar)

Overrange: 300% upper range limit (URL)

Output: 4-20 mA_{dc}, limited to 30 mA_{dc}

Power Supply: 12 to 40 Vdc with reverse polarity protection.

Loop Resistance: 1400 ohms max. @ 40 volts

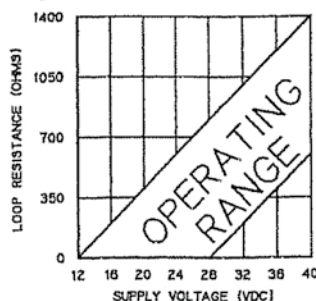

Turndown: 5:1

Zero Adjust: $\pm 10\%$

Span Adjust: $\pm 10\%$

Temperature Limits:

Electronics (Ambient) -40°F to 140°F (-40°C to 60°C)

Process Interface -40°F to 212°F (-40°C to 100°C)

Storage -40°F to 212°F (-40°C to 100°C)

Humidity Limits: 0-100% RH

PERFORMANCE SPECIFICATIONS

Accuracy: $\pm 0.25\%$ of calibrated span including linearity (BFSL), hysteresis and repeatability.

Response Time: Time constant of 20 msec.

Stability: $\pm 0.5\%$ of upper range limit for six months.

Temperature Effect:

(includes zero & span)

Compensated -20°F to 180°F (-29°C & 82°C)

Between -30°F and 130°F (-1°C & 54°C): $\pm 1\%$ of URL per 50°F (28°C)

Between -20°F and 180°F (-29°C & 82°C): $\pm 1.6\%$ of URL per 50°F (28°C)

Power Supply Effect: $\pm 0.005\%$ FS per volt

Surge Protection: Standard

Vibration Effect: $\pm 0.1\%$ of upper range @t for 3g to 200 Hz.

Position Effect: Zero shifts up to 0.01 psi.

Overrange Effect: $\pm 0.15\%$ FS per 300 of max. range

PHYSICAL SPECIFICATIONS

Materials of Construction

Process Wetted Parts: 316L SS

Diaphragm (Model 85 IF): HASTELLOY C

Non Wetted Parts: 316SS, Buna N "O" Ring Seal

Fill Fluid: DC 200 Silicone (Standard)

Process Connection: Reference Model Code


Electrical Connection: Reference Model Code


Weight: 1 lb.

Cable Length: 24 inches (61 cm), 22 AWG

SECTION I

SPECIFICATIONS

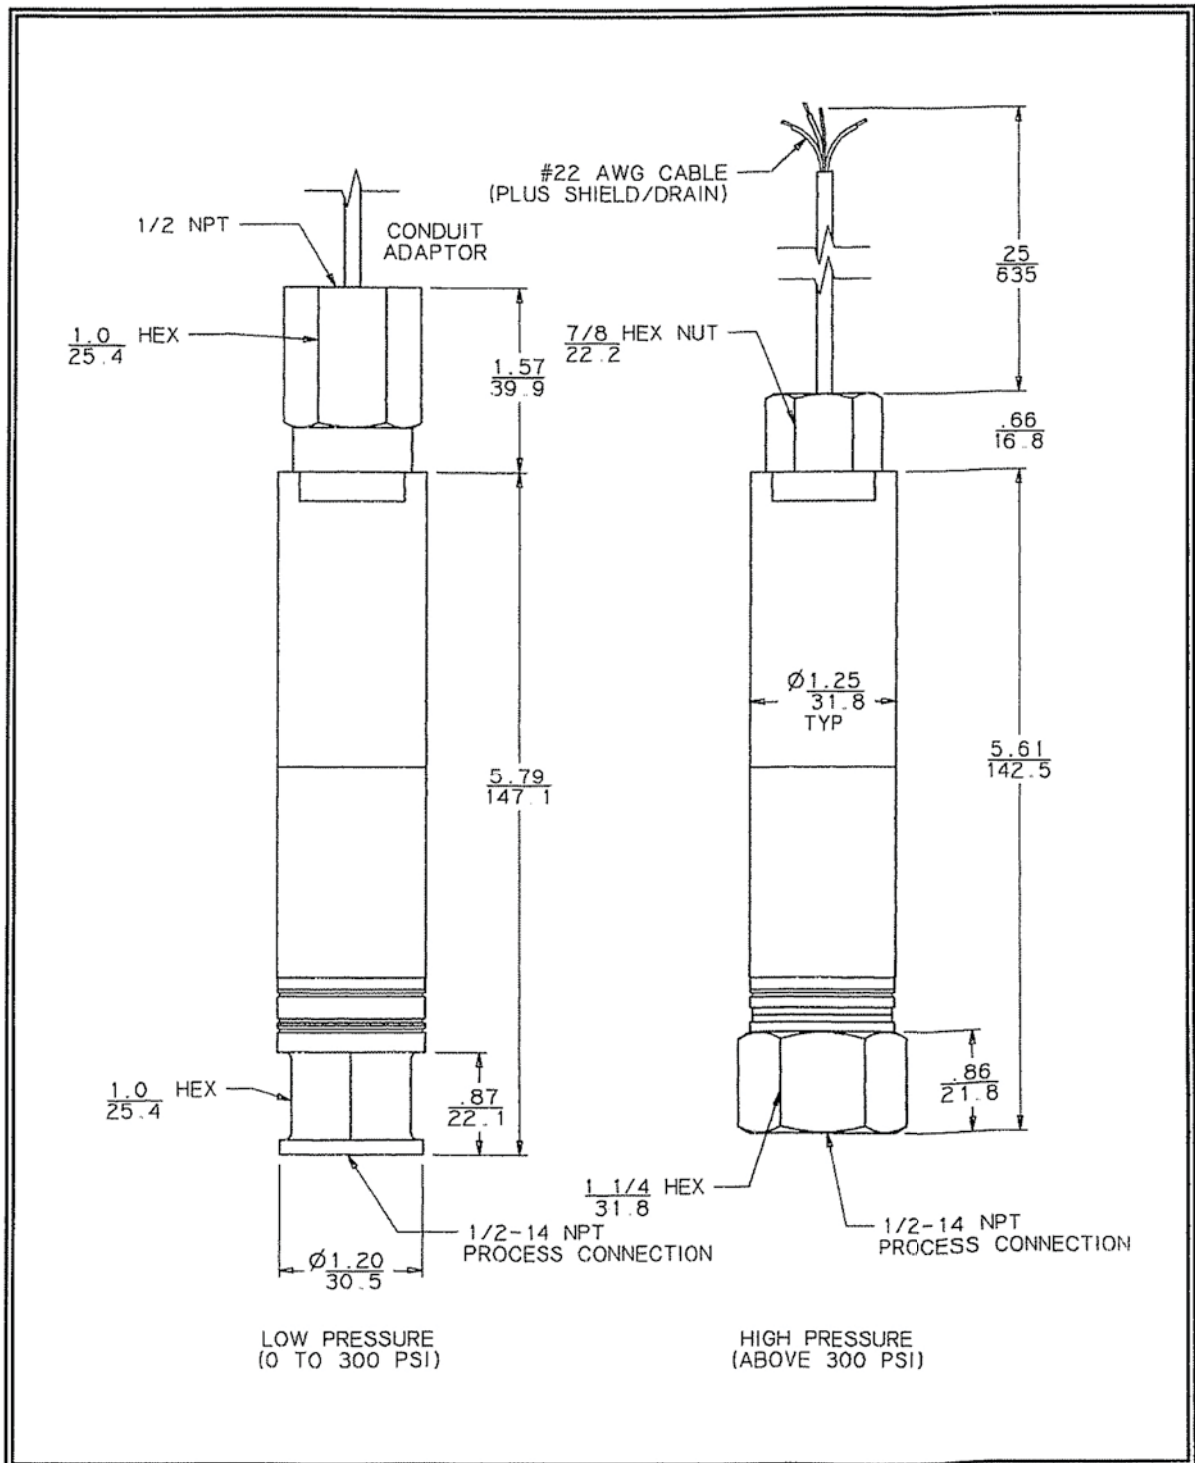

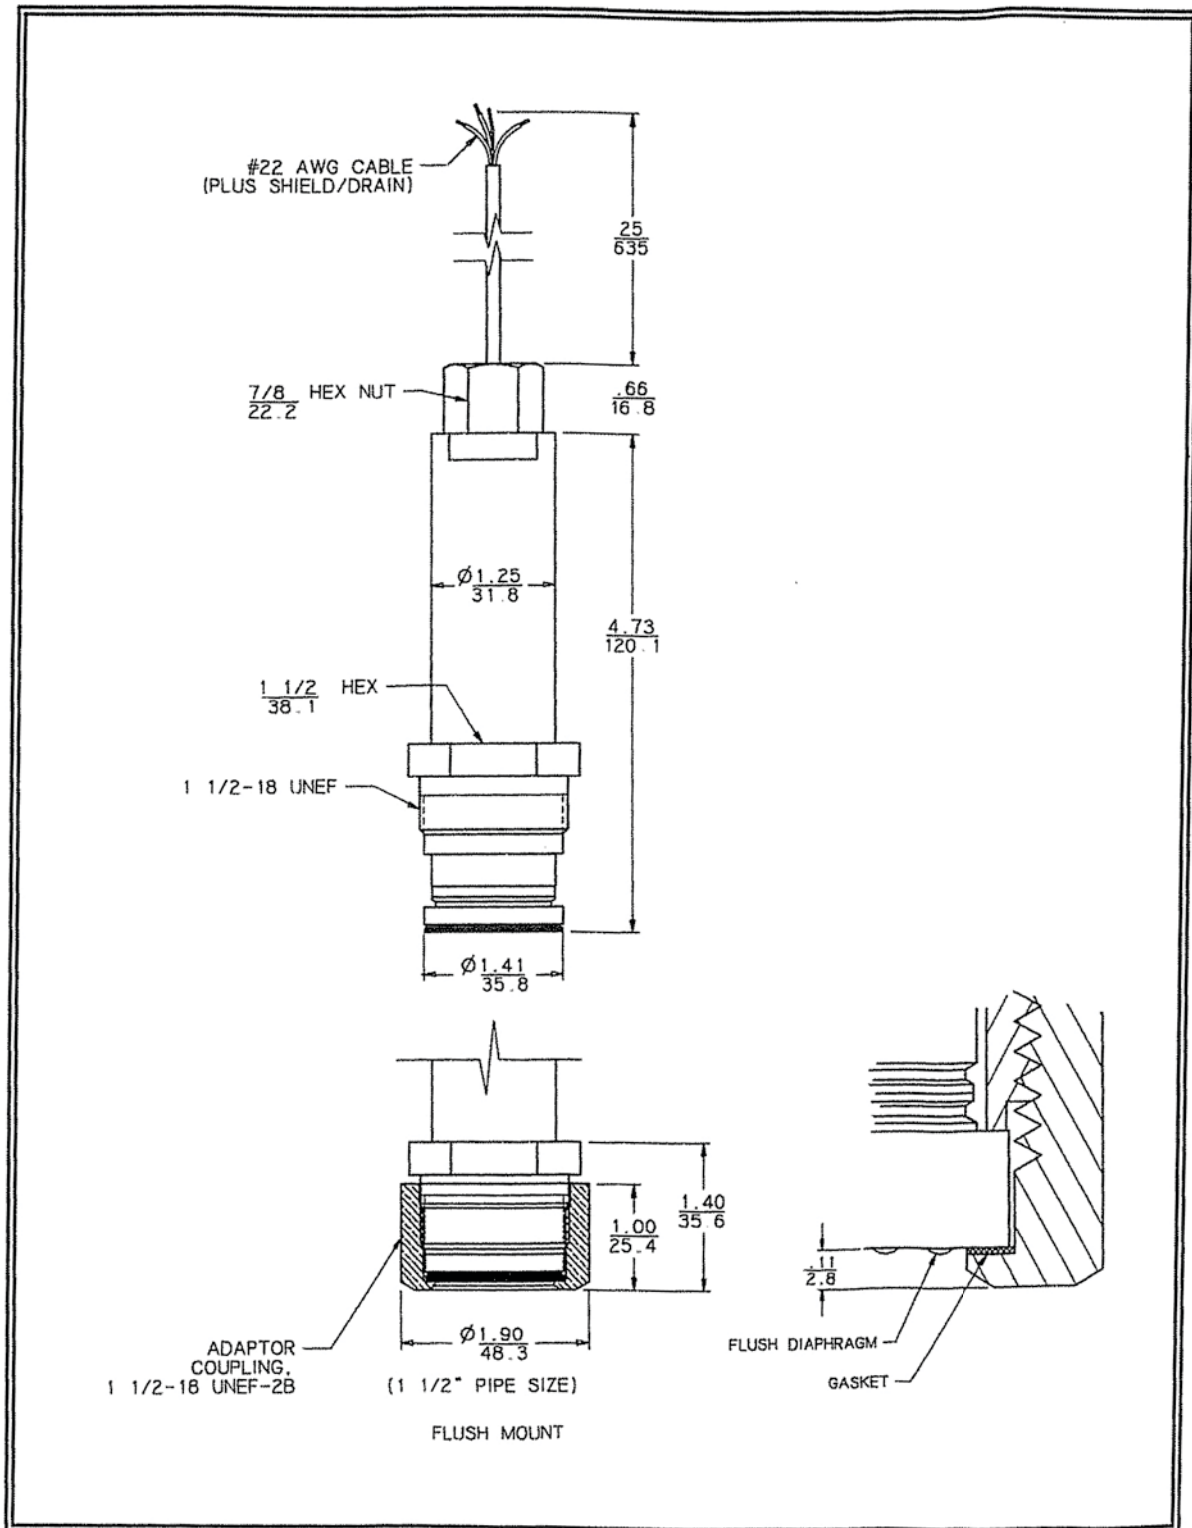

SECTION I

SPECIFICATIONS

CLASSIFICATION (FM & CSA)

FACTORY MUTUAL APPROVALS:

Models with conduit electrical connection (Option "C") are FM approved as Explosion-proof for Class 1, Div. 1, Groups C & D; Dust-ignition proof for Class 11, Div. 1, Groups E & G and suitable for Class III, Div. 1; Hazardous Locations, NEMA 4 enclosure. Conduit seal must be within 18 inches of transmitter.

CANADIAN STANDARDS

ASSOCIATION (CSA) APPROVALS:

All models meet CSA requirements for intrinsically safe operation in Hazardous Locations as designated by Class 1, Div. 1, Groups A,B,C, & D and Class II, Groups F,E, & G.

Models with conduit electrical connection (Option "C") meet CSA requirements for Explosion-proof in Hazardous Locations as designated by Class I, Div. 1, Groups B,C, & D, Class II, Groups E,F, & G and Class III. The enclosure meets CSA requirements for Enclosure 4.

NOTE: "Exia" is defined as Intrinsically Safe
Securite Intrinseque.

BARRIER REMARKS:

- A. Installation of barrier should be in accordance with the manufacturer's instructions.

CSA - Figure 2-5.

- B. Barrier output terminals should not be exposed without de-energizing all system input power.
- C. Resistance from barrier to ground should not exceed one ohm, and non-hazardous location equipment associated with this system shall not employ or generate in excess of 250 V rms (360 volts peak).

- D. Barrier Entity requirements:

CSA - $V_{max} = 28 \text{ VDC}$, $I_{max} = 104 \text{ mA}$,
 $R_{min} = 290 \text{ ohms}$

MODEL	AMETEK
SERIAL	PMT DIVISION
CAL RANGE	MADE IN USA
MAX PRESS	IN 12-40 VDC
TAG No	OUT 4-20 mADC
	DATE
Factory Mutual EXPLOSIONPROOF FOR CL I, II, III, DIV 1, GR C D E, G FOR HAZ LOC. MAXIMUM AMBIENT TEMPERATURE = 60°C. NEMA 4 ENCLOSURE	
Approved	
Exia- INTRINSICALLY SAFE FOR CL I, DIV. 1 2, GR A, B, C D: CL II. GR E, F, G WHEN CONNECTED PER AMETEK DWG BK750483 EXPLOSIONPROOF FOR CL I, DIV. 1, GR B, C D: CL II, GR E, F G: LR 50598 CL III FOR HAZ. LOC. TEMP CODE T3C. ENCLOSURE 4	
KEEP COVER TIGHT WHILE CIRCUITS ARE ALIVE GARDER LE COUVERCLE BIEN FERME TANT QUE LES CIRCUITS SONT SOUS TENSION CONDUIT SEAL MUST BE WITHIN 18 INCHES OF TRANSMITTER	

SECTION II

INSTALLATION

PIPING FOR THE MODEL 851T


Transmitter mounting is shown in Figure 2-1A and 2-1B, of Figure 2-1, below.


Conduit drain should be provided to prevent moisture buildup in the conduit compartment

Figure 2-1C shows a transmitter mounting with an elbow used to prevent sediment in process from clogging the line.

Figure 2-1D shows a transmitter mounting with an elbow used to eliminate trapped vapor.

Figure 2-2 shows steam piping diagrams.

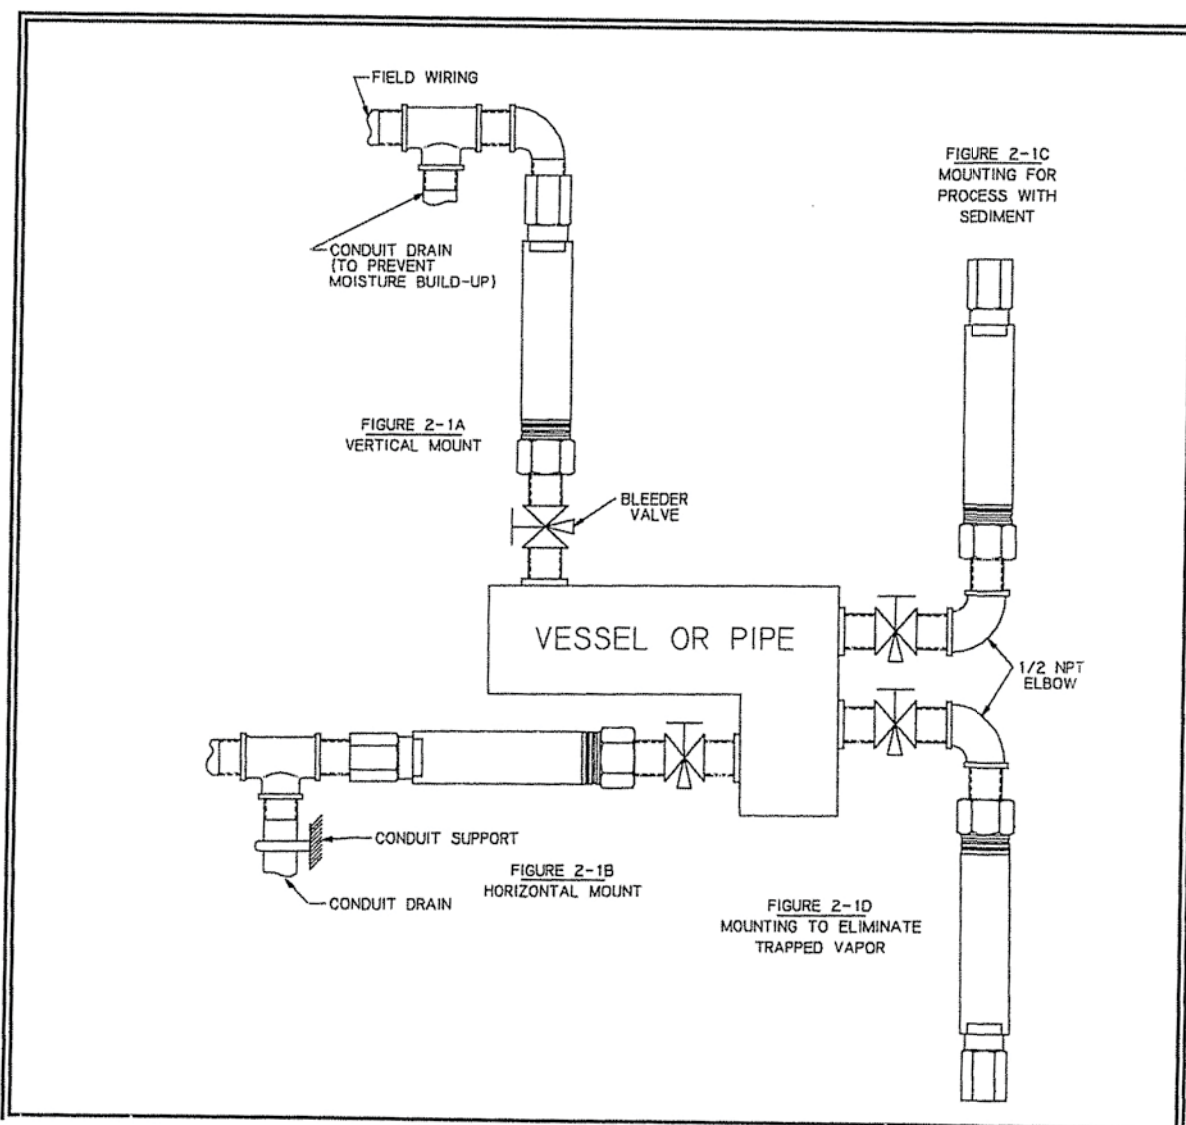

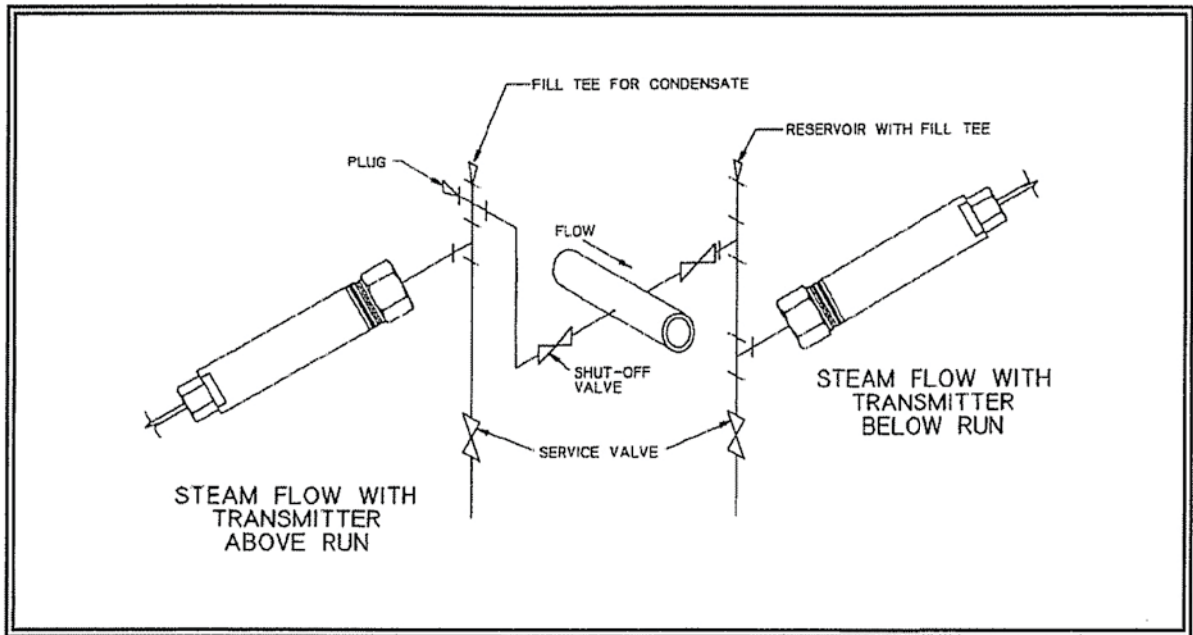

SECTION II


INSTALLATION

PIPING FOR THE MODEL 851F

CAUTION – The Model 851F is shipped with a Protective cover over the flush diaphragm. Do not damage the diaphragm after removing the cover.

To install the Model 851F, the adapter coupling must be welded to the customer's pipe @ pipe flange, or other fitting. Figure 2-3 shows some suggested installations and lists suggested pipe sizes, wall and flange thicknesses and hole sizes. The installation procedure is as follows:

1. Cut hole for adaptor coupling.
2. Thread plug into the coupling (Figure 2-3) until it bottoms. Do not use the gasket.
3. Position the coupling so that the inside face is approximately flush with the inside surface of the customer's pressure vessel and tack weld the coupling to hold in place.
4. With the plug still in the coupling, weld a 1/8" fillet all around the coupling. The plug minimizes the distortion of the coupling due to the welding operation.
5. Remove the plug.
6. Install the gasket into the coupling (Figure 2-3). Insert the Model 851F into the coupling by screwing the threaded retainer (part of the Model 851F) into the coupling until the gasket just starts to compress. Tighten the retainer another 1/6 revolution (one hex flat).

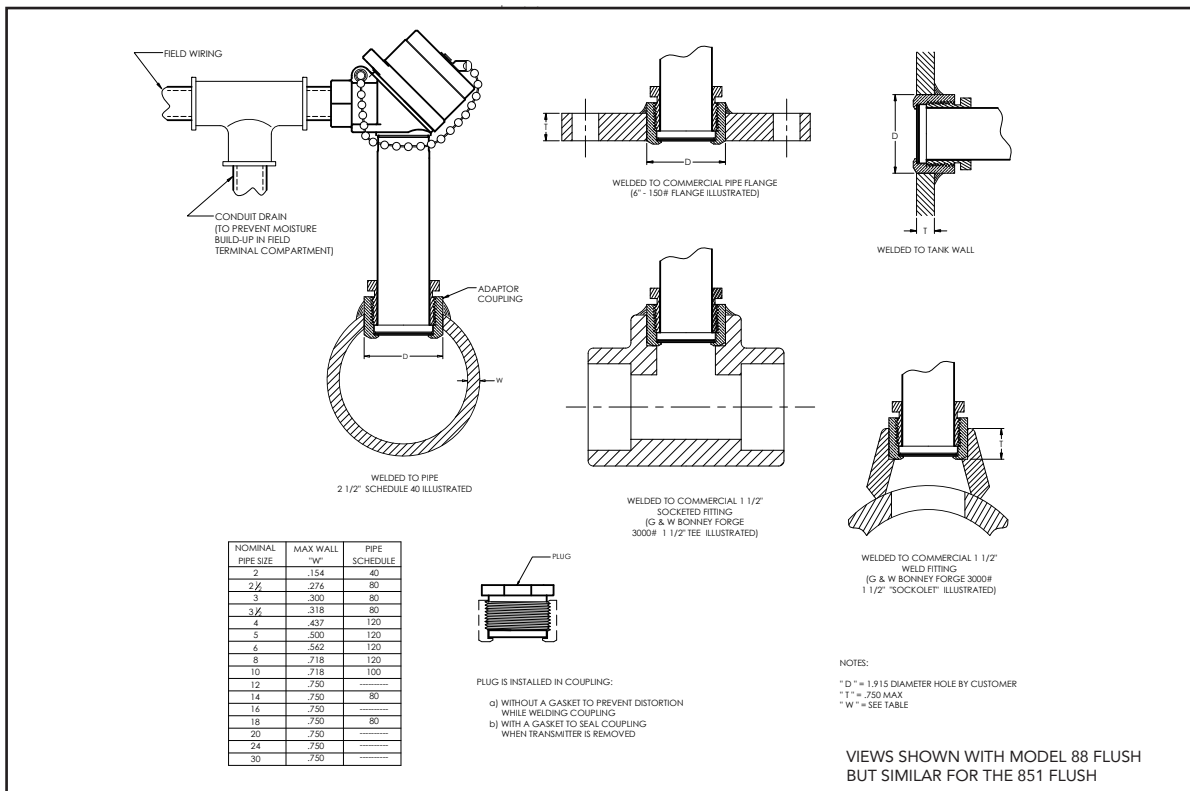

WIRING

NOTE - An optional 1/2 NPT female conduit connection on the Model 851 provides entry for customer's wires and conduit fitting. It is suggested that a conduit drain be installed to keep moisture out. Explosion proof applications require that the explosion proof conduit seal be installed within eighteen inches of the transmitter.

CAUTION - Power must be off while connections are made to the terminals.

There are three terminals (+ signal, - signal and ground) located on the terminal board in the terminal compartment. The transmitter housing is normally grounded. The circuit is protected from reversing Polarity. The connection terminals of the transmitter will accept a stripped wire lead from No. 14 AWG to No. 22 AWG.

To wire the transmitter to a receiver and power supply:


1. Install a wire between the negative terminal (black wire) of the transmitter and the negative terminal of the power supply. (see Figure 2-4)

2. Install a wire between the positive terminal (red wire) of the transmitter and the negative terminal of the receiver. (see Figure 2-4).
3. Install a wire between the positive terminal of the power supply and the receiver.
4. If the case is to be grounded, use the ground position (green wire) on terminal provided for this purpose. (see Figure 2-4).


NOTE - In order to avoid 'Ground Loop' conditions, there should be only one ground in a loop.

NOTE - The split body and conduit adapter must be closed tightly to ensure explosion proof design.

NOTE - The Shield/Drain is normally tied to ground at the receiver for optimal noise rejection.

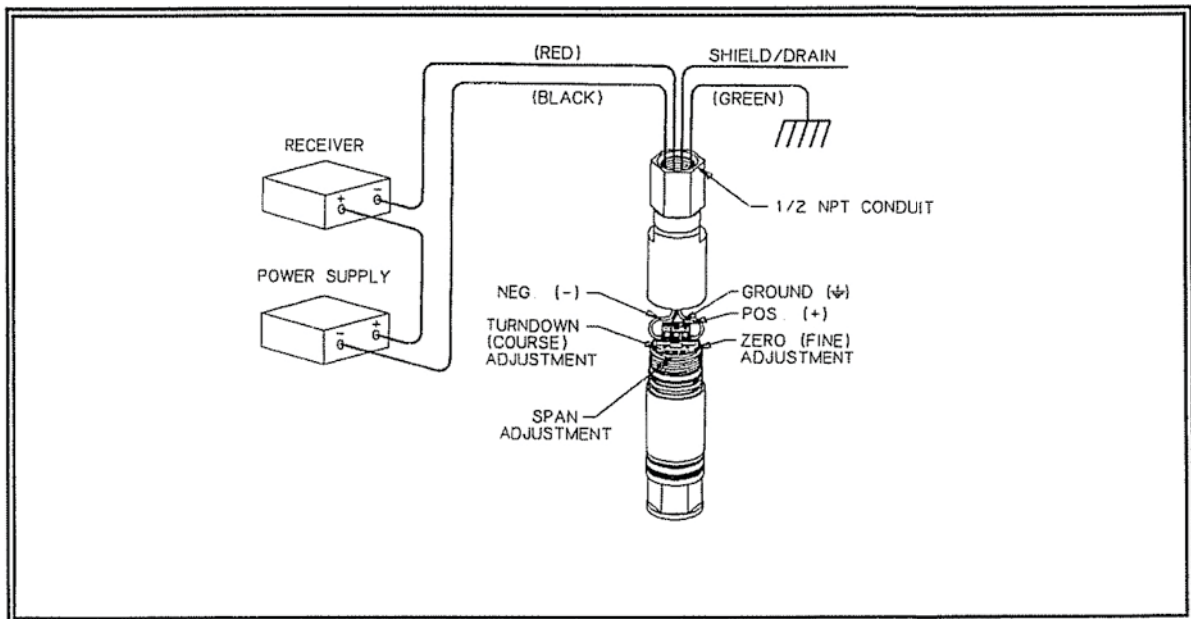


BASIC INSTALLATION CIRCUIT DIAGRAM

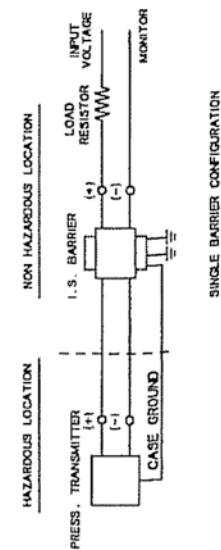

SUGGESTED LIST OF CSA APPROVED BARRIERS:

MANUFACTURER	MODEL NO.	PUBLICATION NO.
STAHL	8901/31-280/100/70	8901003310
STAHL	8903/31-315/050/70	8903601310
HONEYWELL	35543-0000-0110-113-F585	S-355-22
MTL	728+	P5700-10
MTL	708	P5700-10

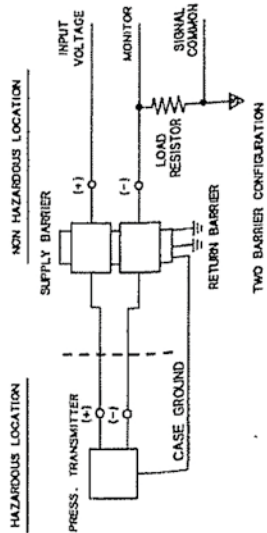

SUGGESTED LIST OF CSA APPROVED BARRIERS:

MANUFACTURER	MODEL NO.	PUBLICATION NO.
STAHL	8901/31-280/100/70 (SUPPLY)	8901003310
STAHL	8901/33-088/080/60 (RETURN)	8901003310
STAHL	8903/31-315/050/70 (SUPPLY)	8903601310
STAHL	8901/33-088/080/60 (RETURN)	8901003310
MTL	787 OR 787S (SUPPLY + RETURN)	P5700-10

NOTES :

- 1) USE ANY CSA CERTIFIED SINGLE CHANNEL ZENER DIODE BARRIER, HAVING SAFETY PARAMETERS OF 28 V MAX/280 OHM MIN. FOR THE SUPPLY BARRIER CONFIGURATION OR FOR THE SUPPLY BARRIER IN THE TWO BARRIER CONFIGURATION.
- 2) TO ASSURE AN INTRINSICALLY SAFE SYSTEM, THE TRANSMITTER MUST BE WIRING IN ACCORDANCE WITH THE BARRIER MANUFACTURER'S FIELD WIRING INSTRUCTIONS.
- 3) INTRINSICALLY SAFE FOR HAZARDOUS LOCATIONS, CLASS I, GROUPS A, B, C, D, CLASS II, GROUPS E, F, G, AND CLASS III

PART NUMBER		REV. NO.		DATE	
A		10/21		RELEASE	
B		10/21		REVISIONS	
C		10/21		REVISIONS	
D		10/21		REVISIONS	
E		10/21		REVISIONS	
F		10/21		REVISIONS	
G		10/21		REVISIONS	
H		10/21		REVISIONS	
I		10/21		REVISIONS	
J		10/21		REVISIONS	
K		10/21		REVISIONS	
L		10/21		REVISIONS	
M		10/21		REVISIONS	
N		10/21		REVISIONS	
O		10/21		REVISIONS	
P		10/21		REVISIONS	
Q		10/21		REVISIONS	
R		10/21		REVISIONS	
S		10/21		REVISIONS	
T		10/21		REVISIONS	
U		10/21		REVISIONS	
V		10/21		REVISIONS	
W		10/21		REVISIONS	
X		10/21		REVISIONS	
Y		10/21		REVISIONS	
Z		10/21		REVISIONS	
AA		10/21		REVISIONS	
AB		10/21		REVISIONS	
AC		10/21		REVISIONS	
AD		10/21		REVISIONS	
AE		10/21		REVISIONS	
AF		10/21		REVISIONS	
AG		10/21		REVISIONS	
AH		10/21		REVISIONS	
AI		10/21		REVISIONS	
AJ		10/21		REVISIONS	
AK		10/21		REVISIONS	
AL		10/21		REVISIONS	
AM		10/21		REVISIONS	
AN		10/21		REVISIONS	
AO		10/21		REVISIONS	
AP		10/21		REVISIONS	
AQ		10/21		REVISIONS	
AR		10/21		REVISIONS	
AS		10/21		REVISIONS	
AT		10/21		REVISIONS	
AU		10/21		REVISIONS	
AV		10/21		REVISIONS	
AW		10/21		REVISIONS	
AX		10/21		REVISIONS	
AY		10/21		REVISIONS	
AZ		10/21		REVISIONS	
BA		10/21		REVISIONS	
BB		10/21		REVISIONS	
BC		10/21		REVISIONS	
BD		10/21		REVISIONS	
BE		10/21		REVISIONS	
BF		10/21		REVISIONS	
BG		10/21		REVISIONS	
BH		10/21		REVISIONS	
BI		10/21		REVISIONS	
BJ		10/21		REVISIONS	
BK		10/21		REVISIONS	
BL		10/21		REVISIONS	
BM		10/21		REVISIONS	
BN		10/21		REVISIONS	
BO		10/21		REVISIONS	
BP		10/21		REVISIONS	
BQ		10/21		REVISIONS	
BR		10/21		REVISIONS	
BS		10/21		REVISIONS	
BT		10/21		REVISIONS	
BU		10/21		REVISIONS	
BV		10/21		REVISIONS	
BW		10/21		REVISIONS	
BX		10/21		REVISIONS	
BY		10/21		REVISIONS	
BZ		10/21		REVISIONS	
CA		10/21		REVISIONS	
CB		10/21		REVISIONS	
CC		10/21		REVISIONS	
CD		10/21		REVISIONS	
CE		10/21		REVISIONS	
CF		10/21		REVISIONS	
CG		10/21		REVISIONS	
CH		10/21		REVISIONS	
CI		10/21		REVISIONS	
CJ		10/21		REVISIONS	
CK		10/21		REVISIONS	
CL		10/21		REVISIONS	
CM		10/21		REVISIONS	
CN		10/21		REVISIONS	
CO		10/21		REVISIONS	
CP		10/21		REVISIONS	
CQ		10/21		REVISIONS	
CR		10/21		REVISIONS	
CS		10/21		REVISIONS	
CT		10/21		REVISIONS	
CU		10/21		REVISIONS	
CV		10/21		REVISIONS	
CW		10/21		REVISIONS	
CX		10/21		REVISIONS	
CY		10/21		REVISIONS	
CZ		10/21		REVISIONS	
DA		10/21		REVISIONS	
DB		10/21		REVISIONS	
DC		10/21		REVISIONS	
DD		10/21		REVISIONS	
DE		10/21		REVISIONS	
DF		10/21		REVISIONS	
DG		10/21		REVISIONS	
DH		10/21		REVISIONS	
DI		10/21		REVISIONS	
DJ		10/21		REVISIONS	
DK		10/21		REVISIONS	
DL		10/21		REVISIONS	
DM		10/21		REVISIONS	
DN		10/21		REVISIONS	
DO		10/21		REVISIONS	
DP		10/21		REVISIONS	
DQ		10/21		REVISIONS	
DR		10/21		REVISIONS	
DS		10/21		REVISIONS	
DT		10/21		REVISIONS	
DU		10/21		REVISIONS	
DV		10/21		REVISIONS	
DW		10/21		REVISIONS	
DX		10/21		REVISIONS	
DY		10/21		REVISIONS	
DZ		10/21		REVISIONS	
EA		10/21		REVISIONS	
EB		10/21		REVISIONS	
EC		10/21		REVISIONS	
ED		10/21		REVISIONS	
EE		10/21		REVISIONS	
EF		10/21		REVISIONS	
EG		10/21		REVISIONS	
EH		10/21		REVISIONS	
EI		10/21		REVISIONS	
EJ		10/21		REVISIONS	
EK		10/21		REVISIONS	
EL		10/21		REVISIONS	
EM		10/21		REVISIONS	
EN		10/21		REVISIONS	
EO		10/21		REVISIONS	
EP		10/21		REVISIONS	
EQ		10/21		REVISIONS	
ER		10/21		REVISIONS	
ES		10/21		REVISIONS	
ET		10/21		REVISIONS	
EU		10/21		REVISIONS	
EV		10/21		REVISIONS	
EW		10/21		REVISIONS	
EX		10/21		REVISIONS	
EY		10/21		REVISIONS	
EZ		10/21		REVISIONS	
FA		10/21		REVISIONS	
FB		10/21		REVISIONS	
FC		10/21		REVISIONS	
FD		10/21		REVISIONS	
FE		10/21		REVISIONS	
FF		10/21		REVISIONS	
FG		10/21		REVISIONS	
FH		10/21		REVISIONS	
FI		10/21		REVISIONS	
FJ		10/21		REVISIONS	
FK		10/21		REVISIONS	
FL		10/21		REVISIONS	
FM		10/21		REVISIONS	
FN		10/21		REVISIONS	
FO		10/21		REVISIONS	
FP		10/21		REVISIONS	
FQ		10/21		REVISIONS	
FR		10/21		REVISIONS	
FS		10/21		REVISIONS	
FT		10/21		REVISIONS	
FU		10/21		REVISIONS	
FV		10/21		REVISIONS	
FW		10/21		REVISIONS	
FX		10/21		REVISIONS	
FY		10/21		REVISIONS	
FZ		10/21		REVISIONS	
GA		10/21		REVISIONS	
GB		10/21		REVISIONS	
GC		10/21		REVISIONS	
GD		10/21		REVISIONS	
GE		10/21		REVISIONS	
GF		10/21		REVISIONS	
GG		10/21		REVISIONS	
GH		10/21		REVISIONS	
GI		10/21		REVISIONS	
GJ		10/21		REVISIONS	
GK		10/21		REVISIONS	
GL		10/21		REVISIONS	
GM		10/21		REVISIONS	
GN		10/21		REVISIONS	
GO		10/21		REVISIONS	
GP		10/21		REVISIONS	
GQ		10/21		REVISIONS	
GR		10/21		REVISIONS	
GS		10/21		REVISIONS	
GT		10/21		REVISIONS	
GU		10/21		REVISIONS	
GV		10/21		REVISIONS	
GW		10/21		REVISIONS	
GX		10/21		REVISIONS	
GY		10/21		REVISIONS	
GZ		10/21		REVISIONS	
HA		10/21		REVISIONS	
HB		10/21		REVISIONS	
HC		10/21		REVISIONS	
HD		10/21		REVISIONS	
HE		10/21		REVISIONS	
HF		10/21		REVISIONS	
HG		10/21		REVISIONS	
HH		10/21		REVISIONS	
HI		10/21		REVISIONS	
HJ		10/21		REVISIONS	
HK		10/21		REVISIONS	
HL		10/21		REVISIONS	
HM		10/21		REVISIONS	
HN		10/21		REVISIONS	
HO		10/21		REVISIONS	
HP		10/21		REVISIONS	
HQ		10/21		REVISIONS	
HR		10/21		REVISIONS	
HS		10/21		REVISIONS	
HT		10/21		REVISIONS	
HU		10/21		REVISIONS	
HV		10/21		REVISIONS	
HW		10/21		REVISIONS	
HX		10/21		REVISIONS	
HY		10/21		REVISIONS	
HZ		10/21		REVISIONS	
IA		10/21		REVISIONS	
IB		10/21		REVISIONS	
IC		10/21		REVISIONS	
ID		10/21		REVISIONS	
IE		10/21		REVISIONS	
IF		10/21		REVISIONS	
IG		10/21		REVISIONS	
IH		10/21		REVISIONS	
II		10/21		REVISIONS	
IJ		10/21		REVISIONS	
IK		10/21		REVISIONS	
IL		10/21		REVISIONS	
IM		10/21		REVISIONS	
IN		10/21		REVISIONS	
IO		10/21		REVISIONS	
IP		10/21		REVISIONS	
IQ		10/21		REVISIONS	
IR		10/21		REVISIONS	
IS		10/21		REVISIONS	
IT		10/21		REVISIONS	

OPERATION

PRINCIPLE OF OPERATION

The Model 851 Pressure Transmitter series is designed to continuously measure process pressure. The heart of the Model 851 pressure transmitter is a silicon piezoresistive sensing chip. This miniature microetched semiconductor gives a voltage output proportional to the applied pressure. This chip is isolated from the process media terminal by a stainless steel diaphragm. A silicone oil, or other specified fill fluid is used to transmit the process pressure to the sensor.

A surface mount amplifier board, enclosed in a sealed chamber, is used to convert the millivolt signal from the sensor to a calibrated 4-20 mA transmitter output. Transmitter electronics are completely surge protected.

Each transmitter is tested over both pressure and temperature ranges. A thick film compensator circuit is used to bring the output of the sensor into specification. After range compensation, every transmitter is tested a second time for pressure and temperature effects to ensure that it meets performance specifications.

ADJUSTMENTS

There are three adjustments which are located in the terminal compartment; zero, span, and turndown.

Zero Adjustment (Z)

Offsets due to elevation or suppression of approximately 10% full scale can be adjusted using the zero adjustment (pot).

Span Adjustment (S)

Span can be adjusted approximately 10% full scale using the span adjustment terminal (pot).

The span adjustment terminal (pot) is used as a fine span adjustment.

Turndown Adjustment (T) 5:1

Range turndown of approximately 80% full scale can be reached using the turndown (T) adjustment terminal. For example a transmitter with a full scale pressure of 100 psi can be "turned down" to 20 psi and still maintain a 4-20 mA output.

The turndown adjustment terminal (pot) can be used as a coarse span adjustment.

CALIBRATION

FACTORY CALIBRATION

The Model 851 Transmitters are factory calibrated at maximum range and ambient temperatures unless otherwise specified.

NOTE - Power must be off while connections are made to tile terminals.

PIPING FOR CALIBRATION

The Model 851 Transmitter can be calibrated out-of-system.

Figure 4-2 shows an out-of -system piping diagram.

CALIBRATION INSTRUMENTATION

NOTE – Calibration equipment should be accurate to five times the accuracy of the transmitter.

The Model 851 Transmitter can be calibrated using an ammeter or voltmeter Figure 4-3.

Use an ammeter with internal shunt impedance greater than 10 ohms will give erroneous readings.


Use a voltmeter with a 10 ohm precision resistor connected as shown in Figure 4-3.


CALIBRATION PROCEDURE

The Model 851 Transmitter can be calibrated using the standard 24" cable supplied with the transmitter.

NOTE - Model 851F calibration requires calibration fittings (Ametek Part No. K900066) or an adapter coupling welded into a fitting to which the customer can apply pressure.

1. Apply 0 psi pressure to input.
2. Adjust "Zero" pot to obtain 4mA (40 mV) output.
3. Apply pressure which corresponds to "full scale" pressure to input.
4. Adjust "span" pot to obtain 20 mA (200 mV) output
5. Repeat steps 1 through 4 until output values are achieved.
6. If "span" required differs from previous span by more than 10%, adjust "turndown" pot prior to "span" pot and proceed to step 4.

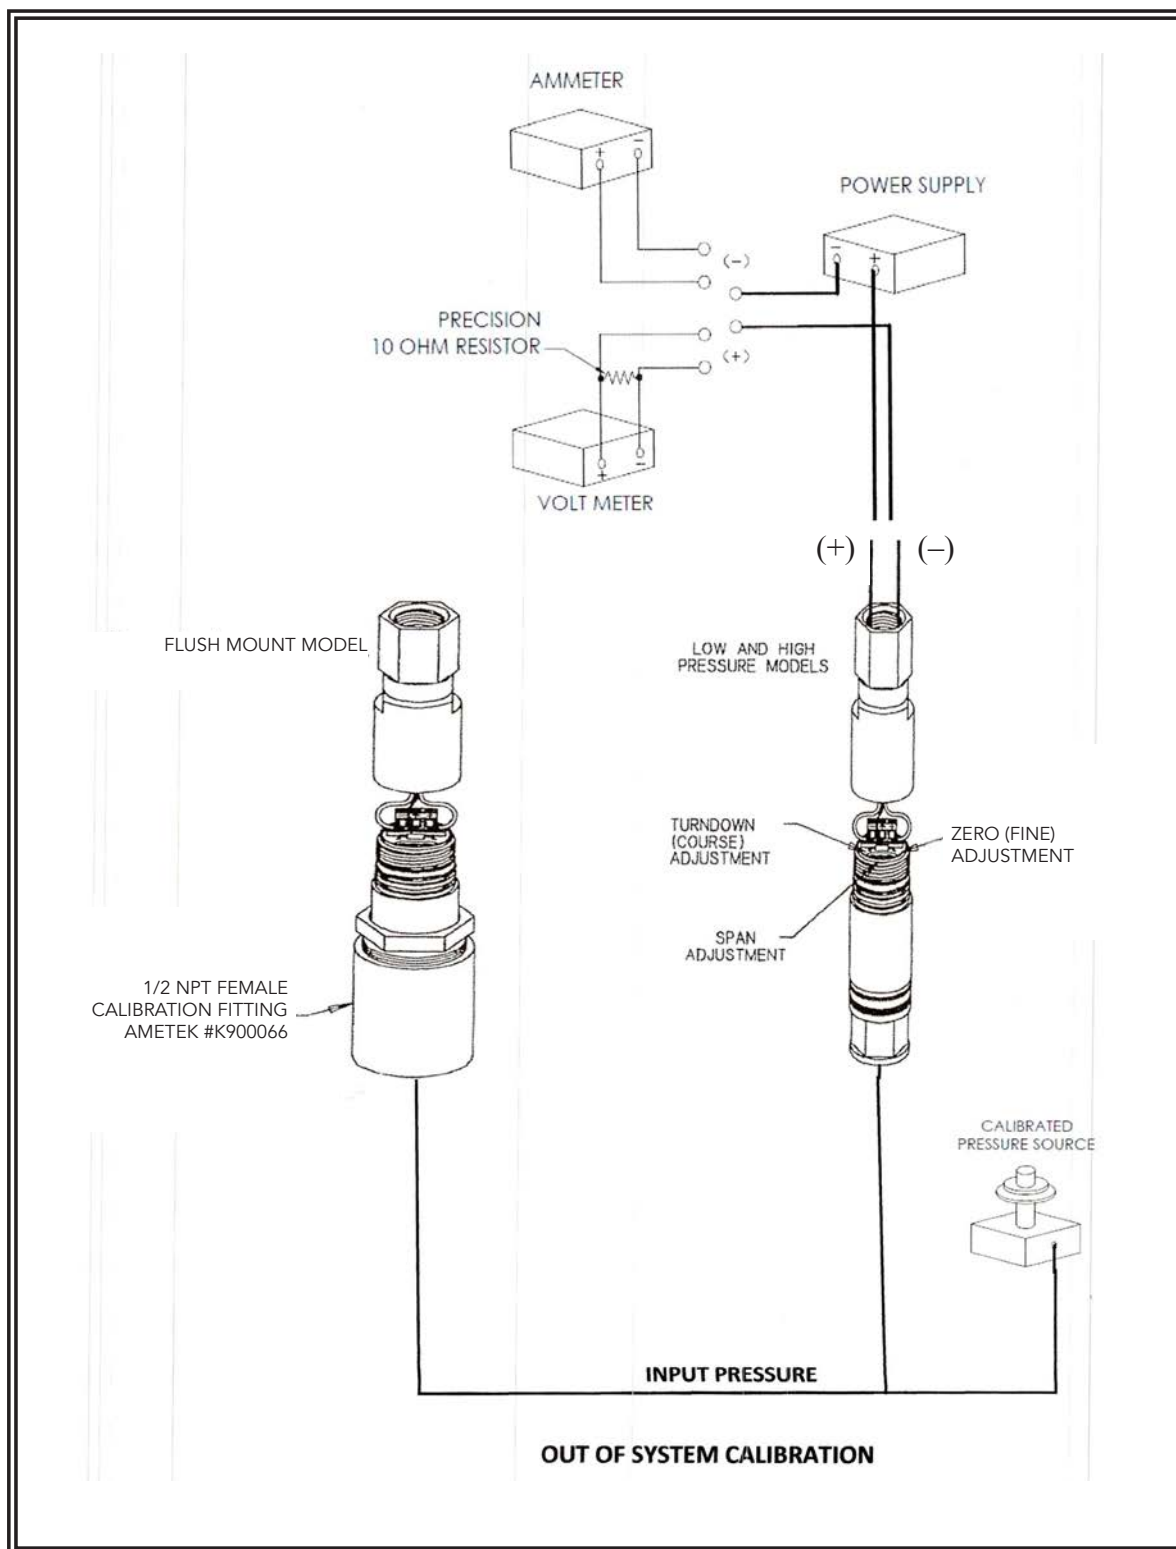

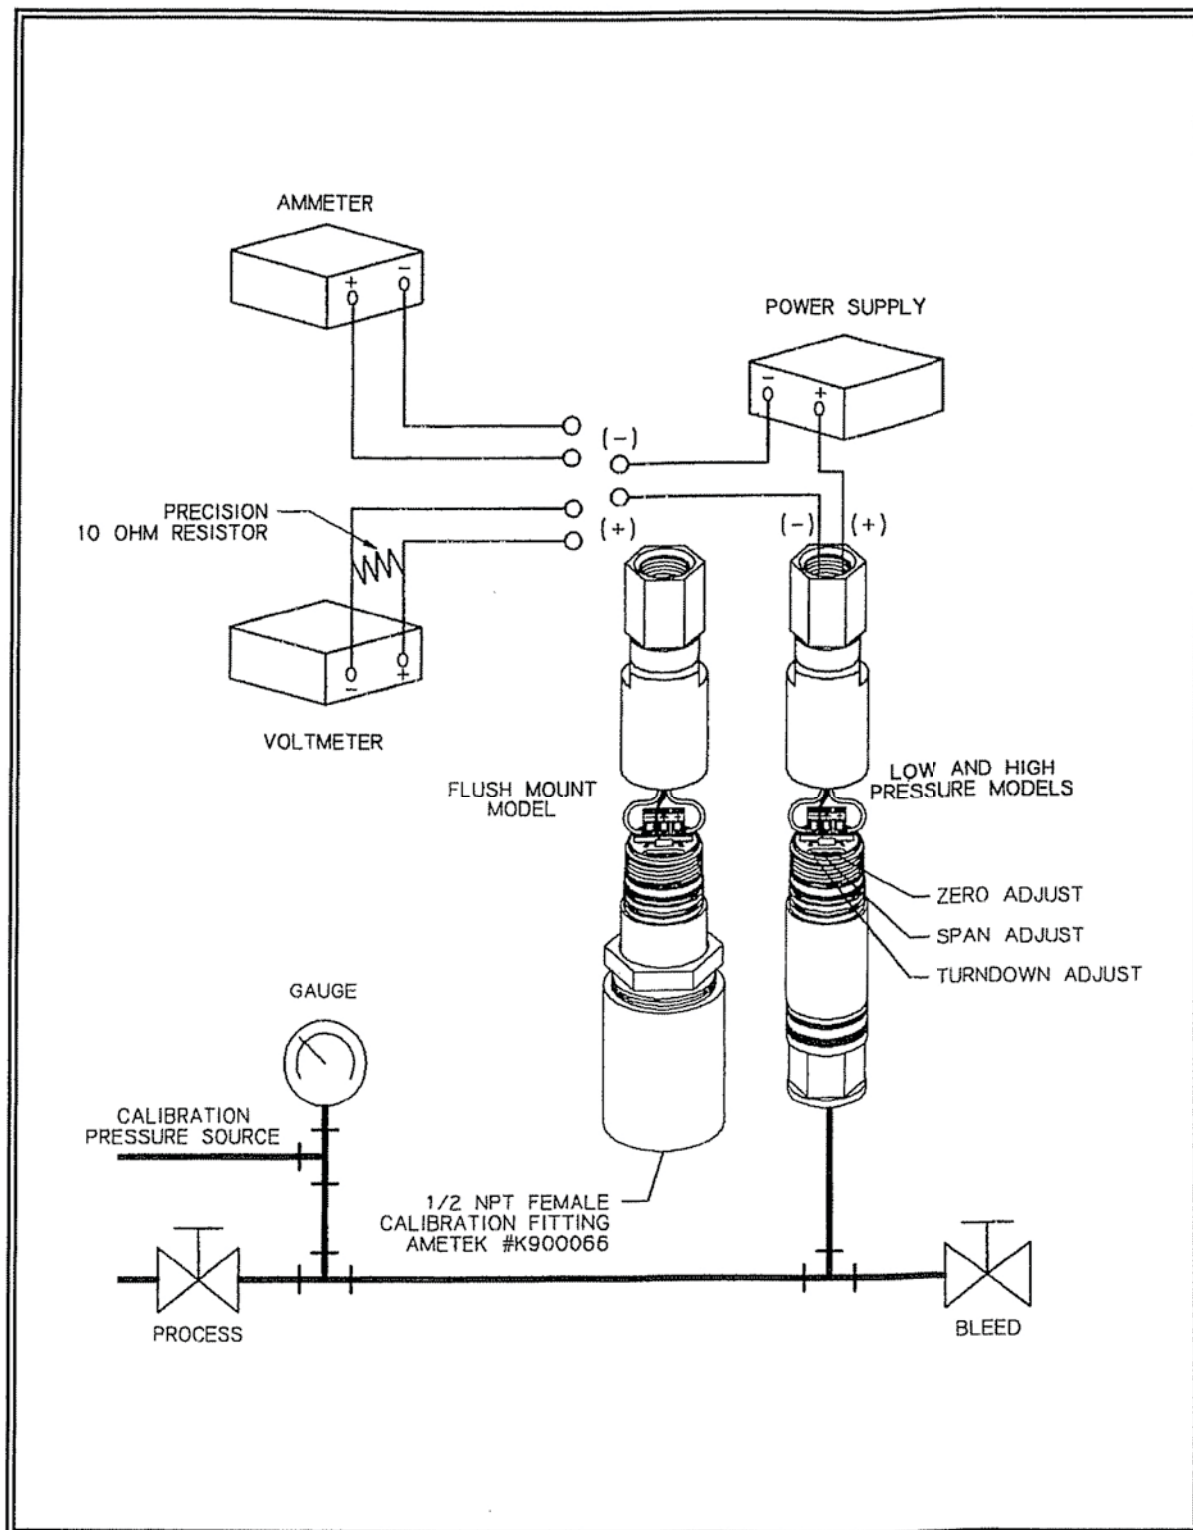

SECTION V

SERVICE & PARTS

FACTORY SERVICE

Factory or field service is available by contacting the Customer Service Department. Supply the following information:

1. Instrument Model Number and Serial Number as shown on the Instrument Data Tag.
2. Description of the problem being experienced.
3. Description and location of the Installation.

For service:

TELEPHONE: (215) 355-6900
FAX: (215) 354-1804
E-MAIL: mctpmt.sales@ametek.com

PARTS - ORDERING

When ordering replacement parts, supply the following information:

1. Part description and part number.
2. Quantity of each item required.
3. Shipping instructions and address.

Mail, Telephone, Fax or Email orders to:
AMETEK
PMT DIVISION
820 PENNSYLVANIA BLVD
FEASTERVILLE, PA 19053

TELEPHONE: (215) 355-6900
FAX: (215) 354-1802
E-MAIL: mctpmt.sales@ametek.com

ACCESSORIES AND SPARE PARTS (851F ONLY)

Part No.	Description
K240231	316 Stn. Stl. Adaptor Coupling
K080343	Plug
K230048	Teflon Gasket
K900066	Calibration Fitting for 851F flush models



U.S. GAUGE DIVISION

PMT PRODUCTS

820 PENNSYLVANIA BLVD. FEASTERVILLE PA 19053

TEL: (215) 355-6900

FAX: (215) 354-1802

E-MAIL: mctpmt.sales@ametek.com

